
产品使用说明书 **USER MANUAL**

产品名称/Description: 立式气压全方位旋转支架 产品型号/Model No.: K104 Full motion desk gas arm


欢迎订购本产品! 在您开始安装本产品之前,请先阅读该说明书 Thanks for buying the product. please read this manual carefully before you start installing.


技术参数 / Spec Data										
	KG	$\sqrt{\dot{\zeta}}$	#	X				NW	GW	屏风安装 (mm) Slatrail installation
显示器尺寸 LCD Size	承重范围(kg) Weight Capacity	升降(mm) Height Adjust	俯仰角度 Tilt	左右摆动 Swivel	旋转 Pivot	VESA	包装箱尺寸 (mm) Packing Size	净重(kg) Net Weight	毛重(kg) Gross Weight	装夹宽度 Install range
≤34″	2-10	240	±25°	±180°	±90°	75*75	内/Inner: 480×200×320	内/Inner: 3.2	内/Inner: 4	- 38~55
						100*100	外/Outter: 500×220×330	外/Outter:	外/Outter: 4.3	

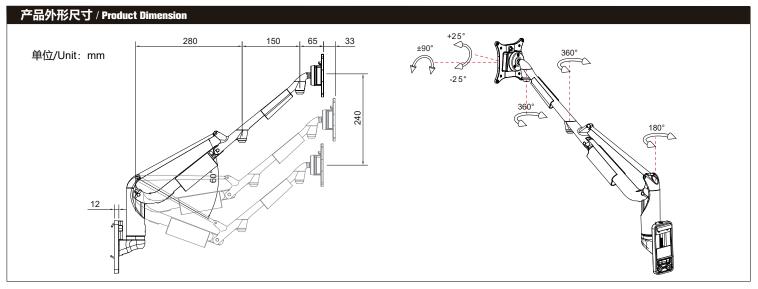


产品部件清单 / Parts List								
序号 No.	部件示图 Image	部件名称 Part No.	部件数量 Quantity					
А			1					
В			1					
С			1					

产品配件清单 / Parts List							
序号 No.	部件示图 Image	部件名称 Part No.	部件数量 Quantity				
а	2	M4×12	4				
b		M5	1				
С		M4	1				
d		M3	1				

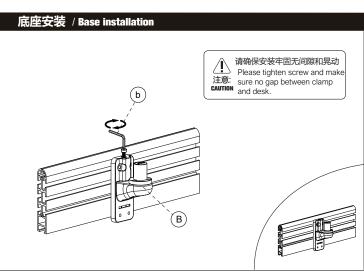

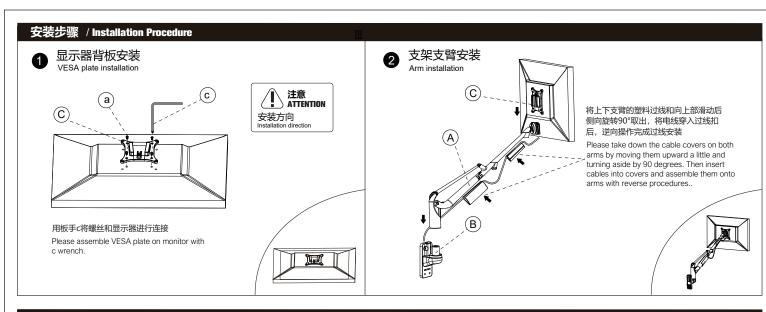

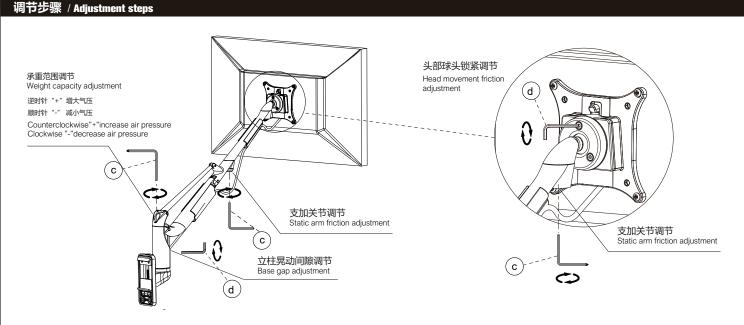

- 1.不要超过额定承重,否则可能会造成显示器损坏或人身伤害。 1.Never overload it. Otherwise, it may cause damage to monitor or human body.
- 2.请务必按照说明书的要求来安装,不正确的安装可能会导致产品损坏或人身伤害。
- 2. Please strictly follow the procedures in this manual for installation. Wrong installation may cause damage to product or human body.
- 3.请使用我们配备的工具和配件安装,否则可能会造成产品损坏。
- 3. Please use the tools and parts provided by us. Otherwise, it may cause damage to product.
- 4.确保安装基座能够安全支撑设备和所有配件的重量。
- 4. Make sure your desk/table is strong enough to support the product and all its parts.
- 5.本产品包含小的部件,如果被吞咽会造成严重人身伤害,请放置在儿童接触不到的地方。 5.This product contains small parts. It will cause personal injury if swallowed. Please put them beyond the places where children can reach.
- 6.请勿在支架组装完成前,安装显示器。
- 6. Please install monitor after assembling this product.
- 7.在调节显示器前请确认显示器是否已经固定牢固。
- 7. Please make sure your monitor is fixed properly before you adjust it.
- 8.不要擅自拆开或更换支架臂。
- 8. Please don't disassemble or exchange the arm of this product arbitrarily.



警 告 WARNING

